


DOWNFLOW FURNACE FILTER ACCESS

“MAKE IT E-Z FOR YOUR CUSTOMER”



- No Furnace Panels Or Door To Remove
- Use Standard Size Filters
- Keep Evaporator Coils Clean
- More Efficient - Heating & Cooling
- Customized Professional Installations
- Creates Customer Referrals

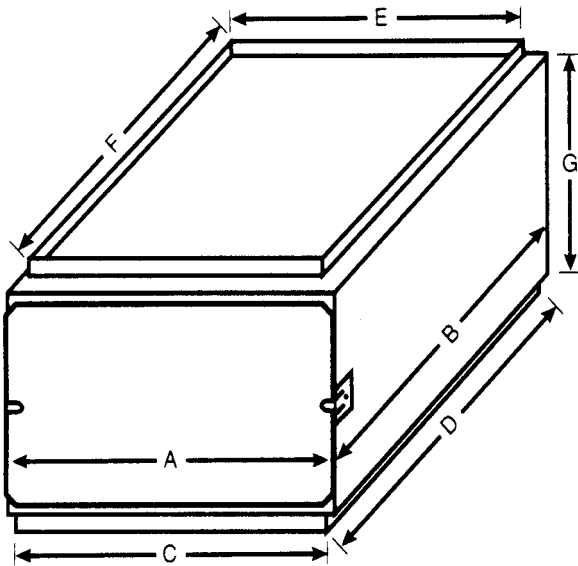

Physical Data And Specifications

FURNACE MODELS	FILTER ACCESS REQUIRED			FURN. RET. OPENING		PLENUM OPENING		HEIGHT	NUMBER FILTERS REQUIRED	APPROX. WEIGHT LBS.
		A	B	C	D	E	F			
P2UHB1204001	DFA-300	17 1/2	21	16 1/4	20 1/4	16 3/4	19 3/4	12	3 - 10 X 20 X 1	14
P2UHB1206001	DFA-300	17 1/2	21	16 1/4	20 1/4	16 3/4	19 3/4	12	3 - 10 X 20 X 1	14
P2UHC1606001	DFA-400	22	21	20	20 1/4	21 1/4	19 3/4	12	3 - 10 X 20 X 1	16
P2UHC1608001	DFA-400	22	21	20	20 1/4	21 1/4	19 3/4	12	3 - 10 X 20 X 1	16
P2UHD2008001	DFA-500	26 1/2	21	23 1/2	20 1/4	25 3/4	19 3/4	12	4 - 10 X 20 X 1	18
P2UHD2010001	DFA-500	26 1/2	21	23 1/2	20 1/4	25 3/4	19 3/4	12	4 - 10 X 20 X 1	18
P2DRA08N0370 1	DFA-200	14 1/2	21	12 3/4	20 1/4	13 3/4	19 3/4	12	2 - 10 X 20 X 1	12
P2DRB12N0550 1	DFA-300	17 1/2	21	16 1/4	20 1/4	16 3/4	19 3/4	12	3 - 10 X 20 X 1	14
P2DRB12N0750 1	DFA-300	17 1/2	21	16 1/4	20 1/4	16 3/4	19 3/4	12	3 - 10 X 20 X 1	14
P2DRC16N0750 1	DFA-400	22	21	20	20 1/4	21 1/4	19 3/4	12	3 - 10 X 20 X 1	16
P2DRC20N0950 1	DFA-400	22	21	20	20 1/4	21 1/4	19 3/4	12	3 - 10 X 20 X 1	16
P2DRD20N1120 1	DFA-500	26 1/2	21	23 1/2	20 1/4	25 3/4	19 3/4	12	4 - 10 X 20 X 1	18

NOTE: FILTERS NOT INCLUDED...Suitable For Use With Disposable Or Electrostatic Filters.

E-Z FILTER BASE MFG., INC.

P.O. BOX 180954 - DALLAS, TEXAS 75218